




# Disassembling HP Envy TouchSmart 15 Accessory Plate

Prerequisite Only

Written By: Robert Patterson

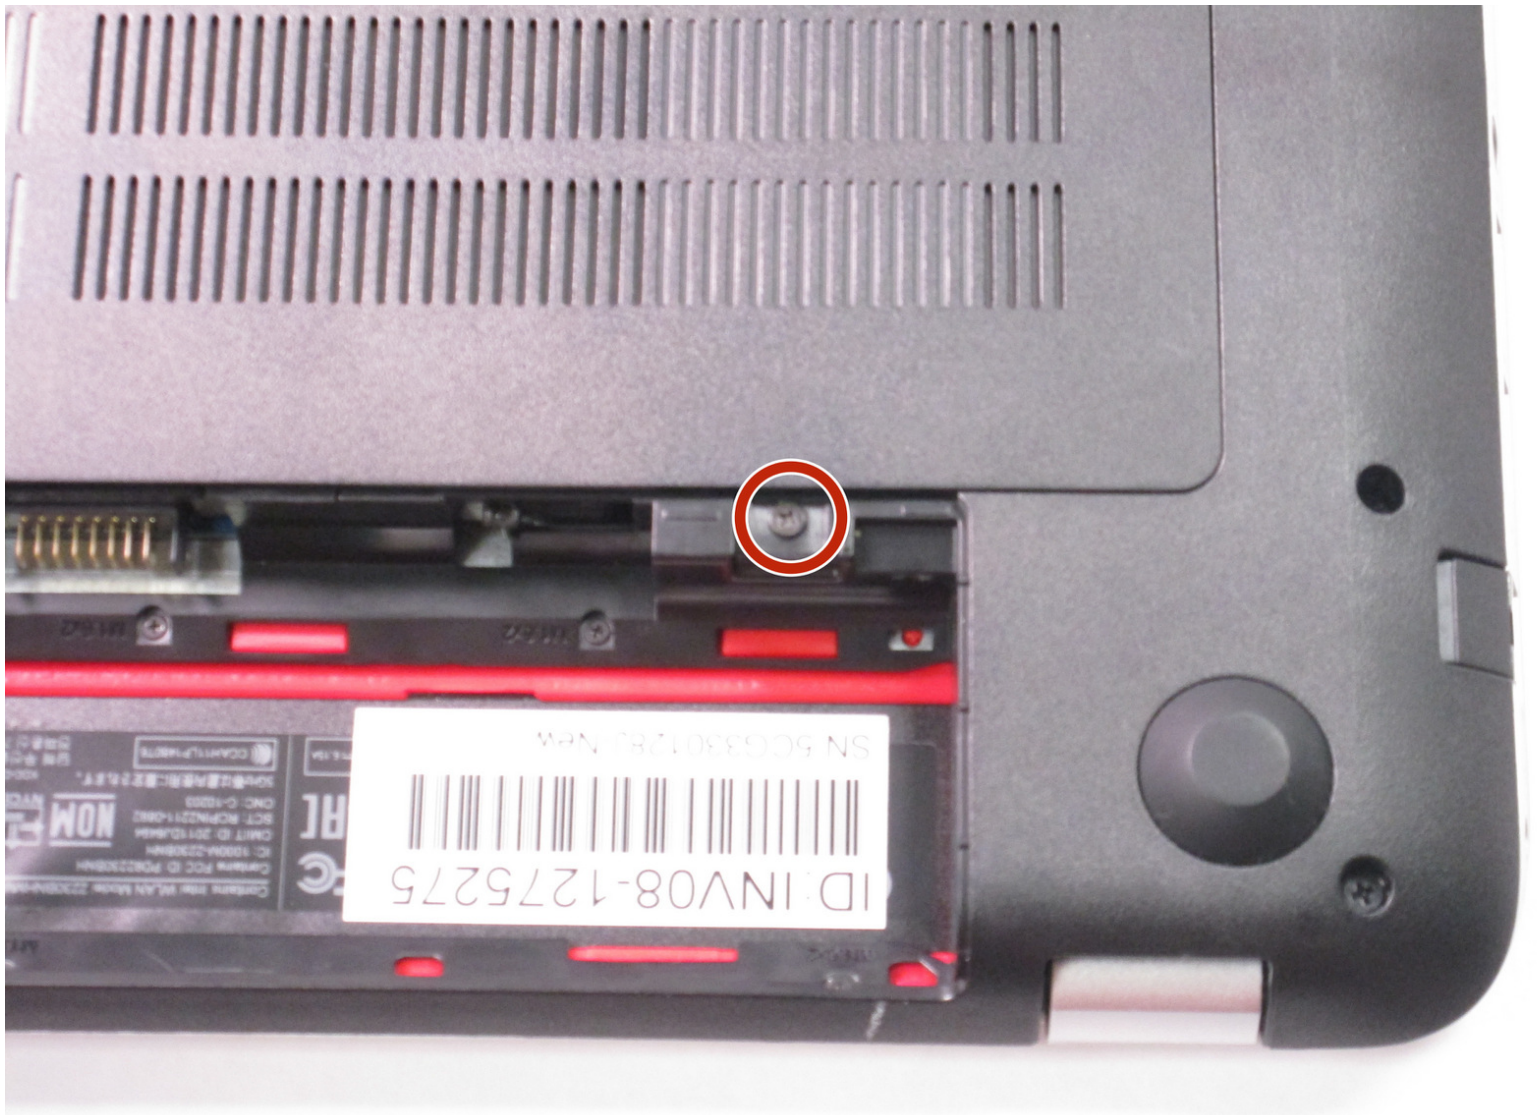



## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Close the lid and turn the device upside down so that you can see the battery.

## Step 2



- Press the battery release tab and the battery will pop up.



### Step 3



- Remove the battery from the laptop, it will come out easily.

### Step 4 — Accessory Plate



- Remove the single screw holding the accessory plate. This is a PH0 2.0x2.5 screw.

## Step 5



- Pry the accessory plate up from the back of the laptop by applying force upwards where the screw was removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-19 06:58:05 AM.